

INSTRUCTIONS FOR SHOT CLOCK OPERATION

Bell Arena

- This shot clock is run by the scoreboard controller. A wired remote must be plugged into the port on the left hand side of the timekeeper's control panel. The wired remote is kept either by the rink crew in the Zamboni garage or in the timekeepers both (I have found it on the floor, at least once). Please ensure that the wired remote is the one with a momentary switch, and not an on-off switch (the latter remote can be used by the timekeeper).
- The wired remote will usually be recognized by the controller when plugged in. Just enter "30" and "yes" when prompted.
- If the wired remote is not recognized by the controller, turn off the scoreboard, turn it back on, enter "no" to the question about starting where it left off and answer the various questions ("yes" to wireless, "yes" to shot clock etc.)
- With this set up, the shot clock will start and stop with the scoreboard. The s/c operator only needs to worry about resets.
- To disable the shot clock, turn off the scoreboard, un-plug the shot clock remote and restart the unit (full re-initialization).

Nepean Sportsplex (rink 1 & 2), Walter Baker Rink B, and Merivale arena:

- Red Button: Start/Stop. Pressing once will start the clock if stopped, and stop the clock if running.
- Orange Button: Reset. Pressing this button will reset the clock to 30 seconds. If the clock is stopped when reset, it will remain stopped displaying 30. If running when reset, it will reset to 30 seconds and keep running.
- Green Button: This is used to program the unit and should not be touched.
- Blue Button: Press and hold this button for 2 seconds to blank the displays. This should be done at the end of each period when there is less time remaining in the period than on the shot clock, and after each game as these units do not shut themselves down after a period of inactivity.

Portables:

- Red Button: Start/Stop. Pressing once will start the clock if stopped, and stop the clock if running.
- Grey Button: Reset. Pressing this button will reset the clock to 30 seconds AND start it running. To reset to 30 seconds and hold, press the Grey button, followed by the Red.
- Pressing a button twice rapidly can confuse these units. If this occurs, wait a second or two and reset.
- When changing the battery in the remote, be careful not to accidentally change the slide-switches used to set the remote code.